

WiFi Internet Radio Media Player with 7" Touchscreen Display Quick Start Guide



aluratek.com

 
model AIRMM04F
q5g Q10426 Copyright © 2016 Aluratek, Inc. All Rights Reserved.

Main Menu



Volume - Back Button Home Button Task Switcher Volume +

Date and Time Settings

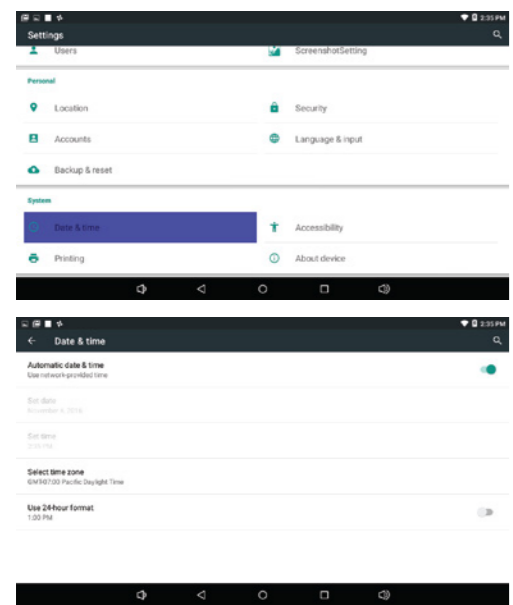


By default, AIRMM04F receives date and time information from the wireless network. When you are outside network coverage, you may want to set date and time information manually using the Date & Time settings.

1. From Home screen, touch: **Settings > Date and Time**
2. Uncheck/disable Automatic date & time
3. Touch a setting to configure:

- **Set date:** Enter the current date
- **Set time:** Enter the current time
- **Select time zone:** Choose your local time zone
- **Use 24-hour format:** Set the format for time displays
- **Select date format:** Set the format for date displays

 Display Settings

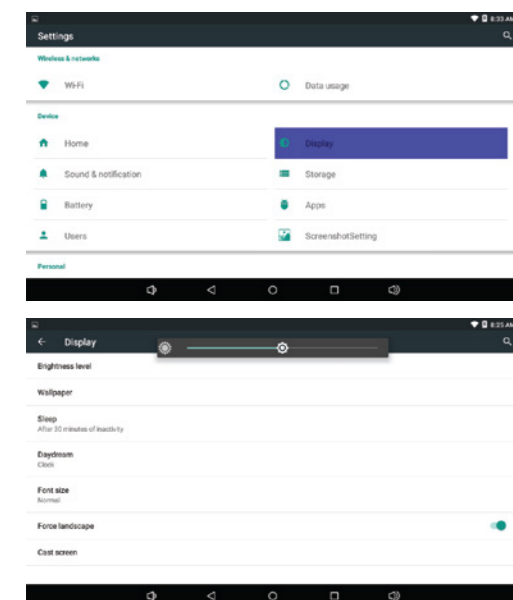

Brightness

Set the default screen brightness:

1. From Home screen, touch: **Settings > Display > Brightness level**
2. Touch and drag the slider to adjust and set the brightness

Sleep

Set the length of delay between the last key press, screen touch or the automatic screen time out (dim and lock):

1. From Home screen, touch: **Settings > Display > Sleep**
2. Select the desired setting

Radio and TV Interference Statement

WARNING!!! This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by whatever measures may be required to correct the interference.

Package Contents

Your order has been carefully packaged and inspected. The following accessories should be included in your package. Please inspect the contents of the package to ensure that you have received all items and that nothing has been damaged. If you discover a problem, please contact us immediately for assistance.



USB Cable

 


Power Adapter



Registration Card

Network Settings

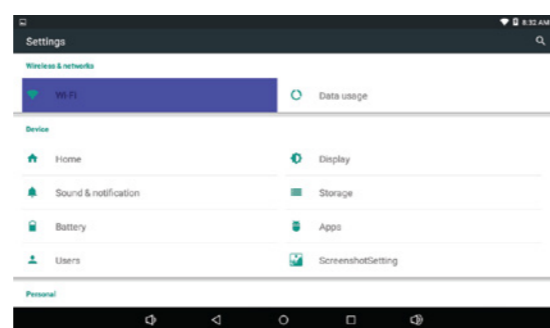

AIRMM04F supports Wi-Fi b/g/n. Use Wi-Fi settings to manage your device's Wi-Fi connections.

Turning Wi-Fi On or Off

Turn your device's Wi-Fi service on or off. When you turn Wi-Fi service on, AIRMM04F automatically searches for available in range Wireless Access Points (WAPs).

1. From Home screen, touch: **Settings > Wi-Fi**
2. Touch the button to turn Wi-Fi On or Off.

Sound Settings

 
Set the volume level for all types of sounds.

Note: You can only set volume when Silent Mode is disabled.

1. From Home screen, touch: **Settings > Sound and Notification**
2. Touch and drag the sliders to set the volume for:
 - Music, video, games, and other media: Sounds for media and so on
 - 3. Touch OK to save your setting

Tip: You can also set System volume from the Home screen by pressing the Volume Keys or the buttons on top of the unit

How To Download Apps

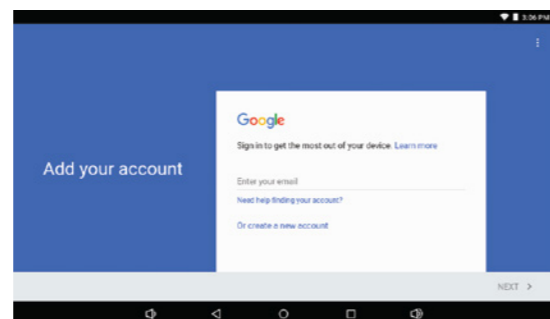


Download app from Play Store:

1. Touch the Play Store icon / tile
2. Follow the on screen instruction to setup a new account or login to your Google account
3. Start to download apps that you like to AIRMM04F

Product Characteristics

 LCD Touchscreen Display

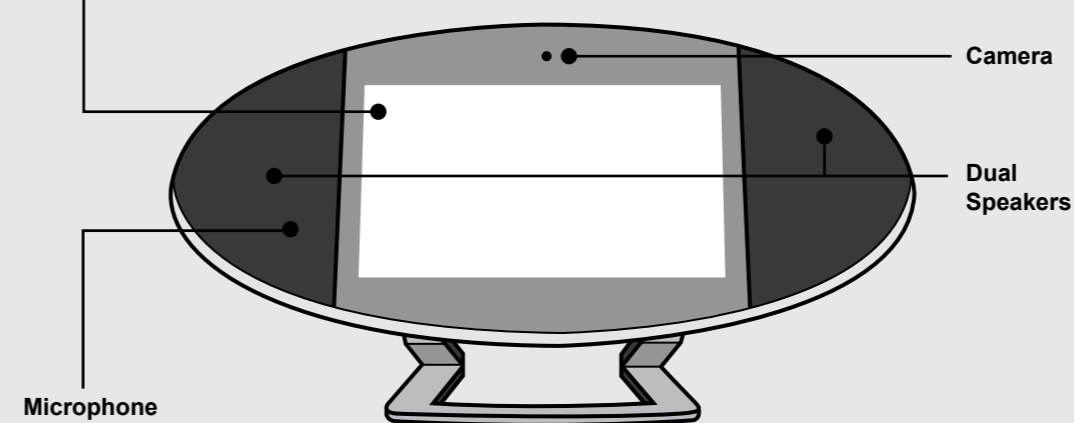

Network Settings

 


Scan

AIRMM04F scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon. If AIRMM04F finds a network that you connected to previously, it connects to it. If not:

1. Touch the Network you want to connect to
2. Use the keyboard to enter Password
3. Touch Connect

Sound Settings

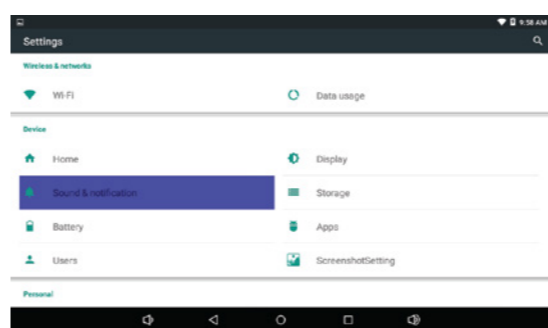

Notification Ringtone

Select a default ringtone for message, alarm and other notifications.

1. From Home screen, touch: **Settings > Sound and Notification**
2. Touch a ringtone to hear a sample and select it
3. Touch OK to save the setting

 
Main Menu Icon / Shortcut Settings




To customize the main screen app tile / shortcut:

1. Touch and hold the tile you want to change
2. Available apps will be display on the screen
3. Select the app that you want on the main screen
4. AIRMM04F will return to the main menu with the selected app as a new tile

Product Characteristics

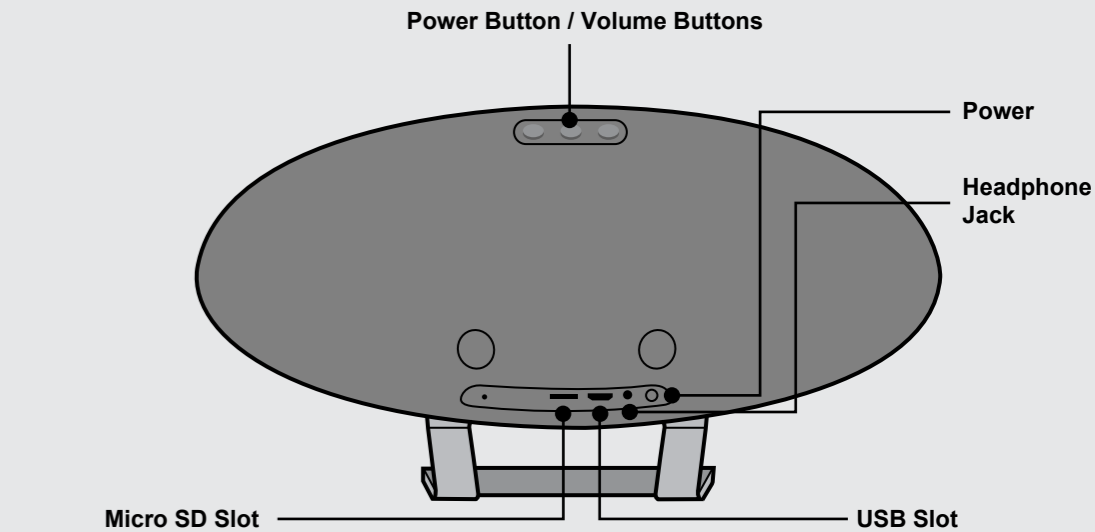

Network Settings

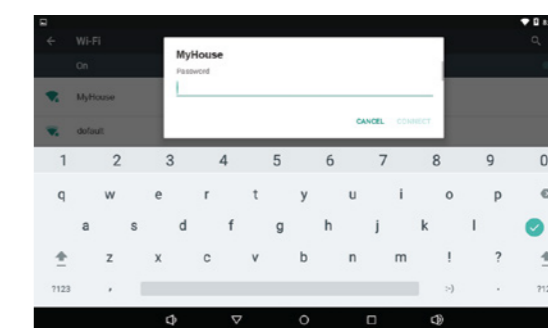 

Add Wi-Fi Network

To open a dialog where you can add a Wi-Fi network by entering its Network SSID (the name it broadcasts), security type and other properties:

1. From Home screen, touch: **Settings > Wi-Fi**
2. Touch "+", then touch "Add Network"
3. Use keyboard to enter Network SSID
4. Touch the Security field and then touch a security type
5. Use the keyboard to enter Password
6. Touch Save

Sound Settings



Audible Selection

When enabled, tones play when you touch screen items.

1. From Home screen, touch: **Settings > Sound Notification > Other Sounds**
2. Touch Sounds to enable or disable sound tones.

Technical Support

If you need further assistance, please contact the Aluratek support department for troubleshooting prior to returning this device.

E-mail: support@aluratek.com
 Web: www.aluratek.com/helpdesk
 Local (Irvine, CA): 714-586-8730
 Toll free: 1-866-580-1978

Warranty

Aluratek warrants this product against defect in material or workmanship for **1 YEAR** from the date of purchase.

This warranty becomes invalid if the factory-supplied serial number or "warranty void" sticker has been removed or altered on the product.

This warranty does not cover:

- A) Cosmetic damage or damage due to acts of God
- B) Accident, misuse, abuse, negligence or modification of any part of the product.
- C) Damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than Aluratek.
- D) Products sold AS IS or WITH FAULTS.

IN NO EVENT SHALL ALURATEK'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, IT'S ACCOMPANYING SOFTWARE, OR IT'S DOCUMENTATION.

Aluratek makes no warranty or representation, expressed, implied, or statutory, with respect to it's products, contents or use of this documentation and all accompanying software, and specifically disclaims it's quality, performance, merchantability, or fitness for any particular purpose. Aluratek reserves the right to revise or update it's product, software or documentation without obligation to notify any individual or entity.