

## Bluetooth 5 True Wireless Earbuds and Rechargeable Case

### Quick Start Guide



aluratek.com

model ABHTWS01F

qsg Q10545 Copyright © 2019 Aluratek, Inc. All Rights Reserved.

## Operation

### Earbud Control Functions

Function	Operation
Power ON	Press the "Touch Button" for 3 seconds
Power OFF	Press the "Touch Button" for 3 seconds
Play / Pause	During music playback, short press the "Touch Button" *
Next Song	During music playback, quickly press the "Touch Button" twice *

\* These features can be done either on the left or right earbuds.

## Operation

### Pairing the earbuds

1. Open the charging case, the earbuds will power on and pair to each other automatically. Please wait until the LED on the left earbud turns off and the LED on the right LED flashing Red/Blue before paring to your device.
2. Activate your device's Bluetooth function and set your device to search for Bluetooth devices. Select ABHTWS01F when it is found.
3. If prompted by your device to connect, please select "Yes".
4. After connecting successfully, the blue LED will flash every 5 seconds.

## Radio and TV Interference Statement

WARNING!!! This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by whatever measures may be required to correct the interference.

## Package Contents

Your order has been carefully packaged and inspected. The following accessories should be included in your package. Please inspect the contents of the package to ensure that you have received all items and that nothing has been damaged. If you discover a problem, please contact us immediately for assistance.



USB Charging Cable



3 sets of earbud tips

## Operation

### Charging the case

The battery is not fully charged and it is highly recommended that you charge the earbuds before you begin using it. The earbuds feature a rechargeable battery for up to 5 hours of continuous talk and music play. The case (with built-in battery) holds multiple charges for up to 15 hours of listening time.

### Charging the earbuds

Connect the larger USB end of the provided cable to your computer/power adapter (not included). Connect the smaller USB end to the USB port on the back of the True Wireless Earbud Battery case. Please charge the case for a minimum of 2 hours. The Blue LED will be flashing while charging. The Blue LED will turn off when it is fully charged.

## Operation

### Answering a phone call

When there is an incoming call, short press the "Touch Button"

### Hang up a phone call

During a call, short press the "Touch Button" \*

### Refuse a phone call

When there is an incoming call, press the "Touch Button" for 2 seconds \*

\* These features can be done either on the left or right earbuds.

## Warranty

Aluratek warrants this product against defect in material or workmanship for **1 YEAR** from the date of purchase.

This warranty becomes invalid if the factory-supplied serial number or "warranty void" sticker has been removed or altered on the product.


This warranty does not cover:

- A) Cosmetic damage or damage due to acts of God
- B) Accident, misuse, abuse, negligence or modification of any part of the product.
- C) Damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than Aluratek.
- D) Products sold AS IS or WITH FAULTS.

IN NO EVENT SHALL ALURATEK'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, IT'S ACCOMPANYING SOFTWARE, OR IT'S DOCUMENTATION.

Aluratek makes no warranty or representation, expressed, implied, or statutory, with respect to it's products, contents or use of this documentation and all accompanying software, and specifically disclaims it's quality, performance, merchantability, or fitness for any particular purpose. Aluratek reserves the right to revise or update it's product, software or documentation without obligation to notify any individual or entity.

## Product Highlights

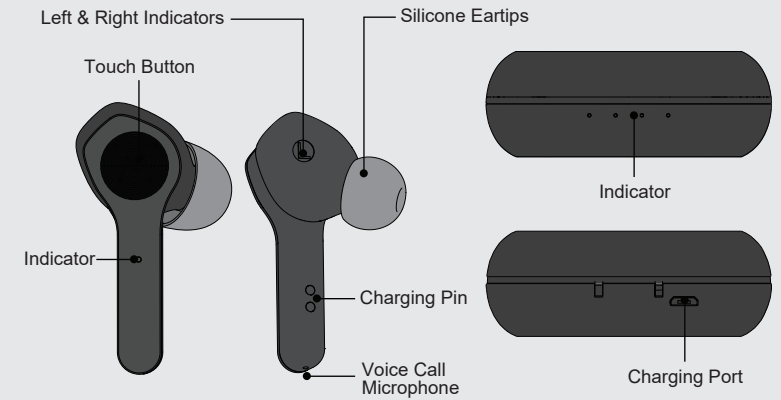

## Operation

### Rechargeable Case LED Indicators - Earbuds in the case

LED Indicator	Status
1st LED	Blue means RIGHT earbud is charging. It will turn OFF when it is fully charged
2nd LED	Blue means LEFT earbud is charging. It will turn OFF when it is fully charged

### Rechargeable Case LED Indicators - Case is open

LED Indicator	Status
1-2 LED ON	Case is 25% - 50% charged
2-3 LED ON	Case is 50% - 75% charged
3-4 LED ON	Case is 75% - 100% charged

## Operation

### Reset the earbuds

1. Long press the "Touch Button" on both earbuds for 10 seconds, until the purple LED flashes alternately to reset the earbuds.

## Technical Support

If you need further assistance, please contact the Aluratek support department for troubleshooting prior to returning this device.

E-mail: [support@aluratek.com](mailto:support@aluratek.com)

Web: [www.aluratek.com/helpdesk](http://www.aluratek.com/helpdesk)

Local (Irvine, CA): **714-586-8730**

Toll free: **1-866-580-1978**